


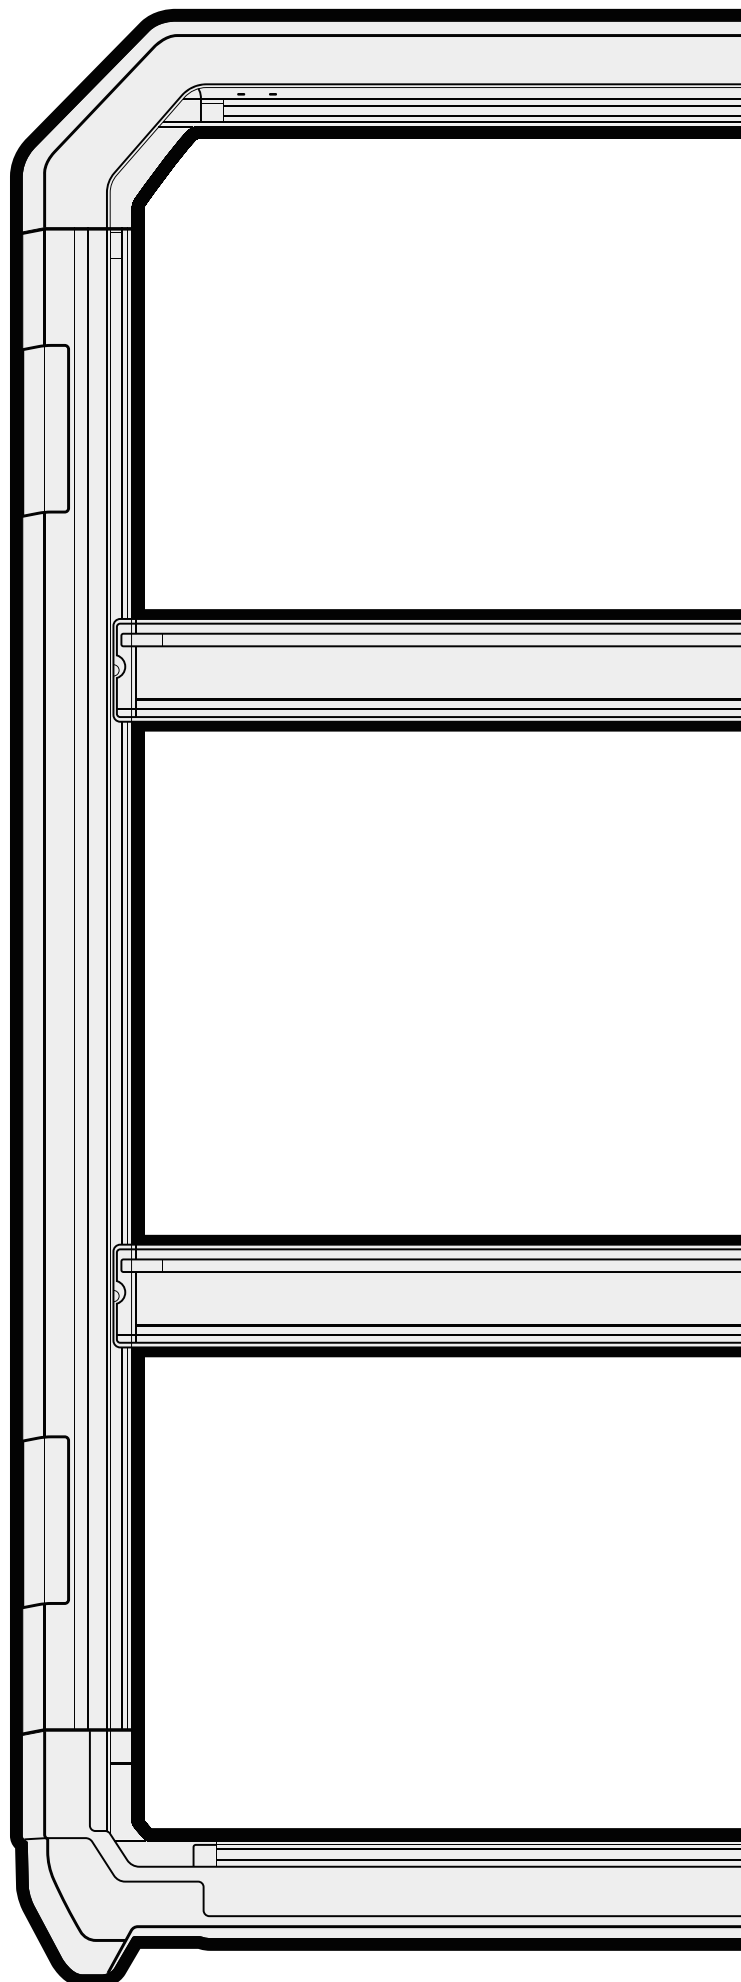

M'LinkX

Roof Rack Platform

INSTALLATION GUIDE



Important Safety Notice

To reduce risk, read and follow this manual before installation and use.

⚠ Safety Precautions

- Ensure all components and mounting brackets are properly installed and tightened before driving.
- Keep installation tools in the vehicle and check fasteners regularly, more often on rough roads or long trips.
- Do not exceed vehicle limits or the product's rated load. Total weight includes the product, brackets, and cargo.
- Distribute cargo evenly and keep the center of gravity low.
- Adjust speed according to load and road conditions. Maximum 120 km/h, and 10 km/h over bumps or rough surfaces.
- Do not modify the product.
- Take care during installation and removal.
- Do not jump on the roof rack or engage in unsafe activities.
- Maintain clearance from the sunroof. Some vehicles may not allow sunroof operation after installation.
- Follow instructions and local laws. Manufacturer is not responsible for damage from misuse.


⚠ Maintenance Guidelines

- Clean only with water or approved car wash products. Avoid alcohol, gasoline, bleach, or strong chemicals.
- Remove the roof rack if unused for long periods. Clean and dry before storage.
- Check components regularly and replace any damaged parts.
- Do not overload. Overload damage is not covered by warranty.
- Surface wear, scratches, or discoloration from use or installation are not covered by warranty.





Off-road conditions are more demanding and require more frequent inspections. Use extra caution on unpaved roads.



Use and Load Guidelines

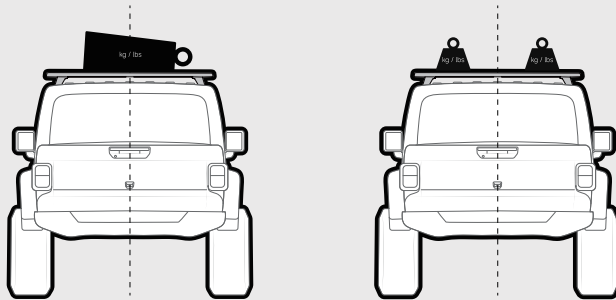


Loading: Keep a low center of gravity, distribute weight evenly, and maintain clearance from the sunroof and antenna.

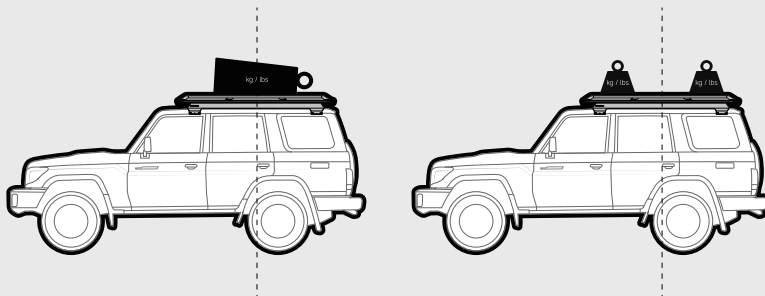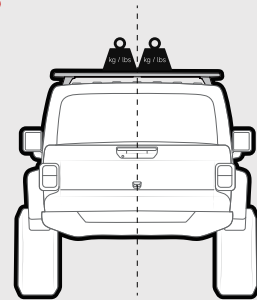


Loading: Avoid concentrating weight at the front or rear.

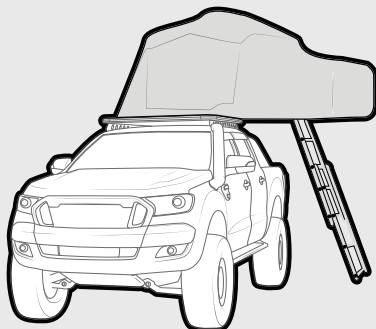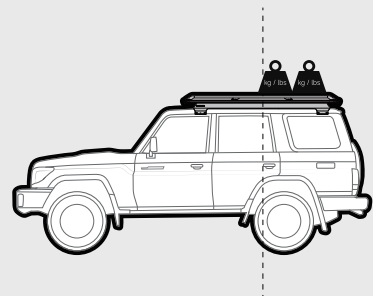

Use extra caution when climbing above 1.2m or 4 ft.

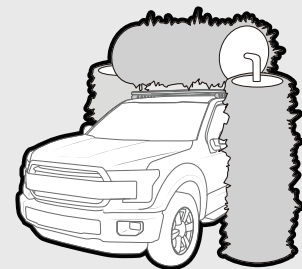

Remove the roof rack and accessories before automatic car washes.

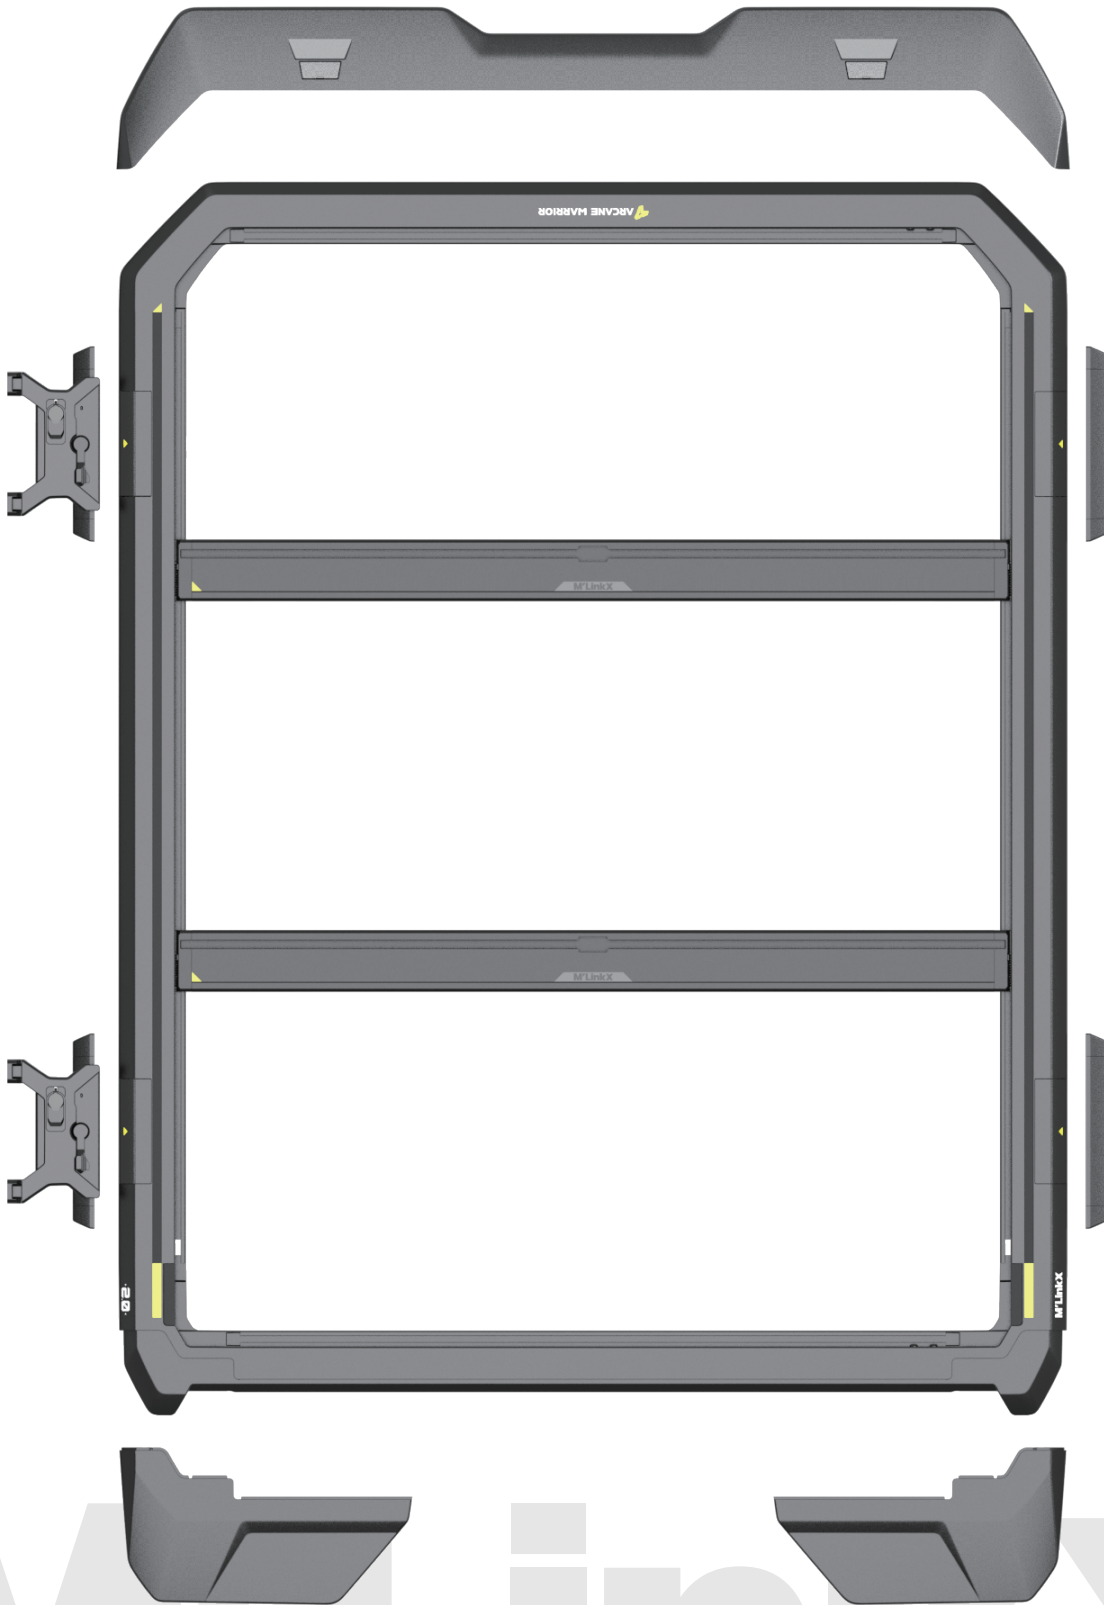


MR Link X

02

Tools & Parts (Multi-Function Expansion Crossbar – Wave Infinite Quick-Release Version)

Wave Infinite Quick-Release Crossbar

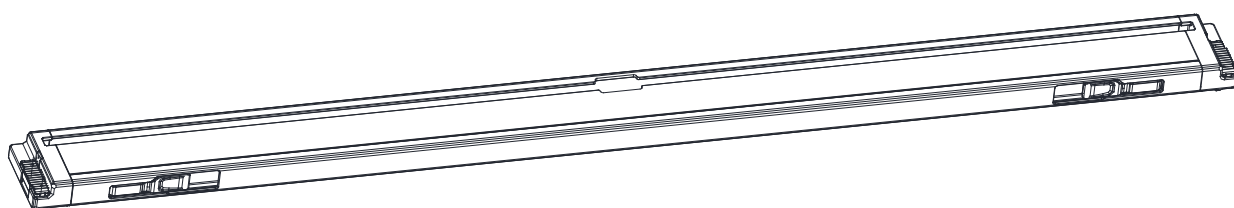

A x1

Installation Tips


Components beyond the roof rack must be purchased separately.

03 Installation Step Guide




Visit **arcanewarrior.info** to watch the installation video and view the electronic manual.

- 1** Flip the handles on both sides of the quick-release crossbar outward by 90°

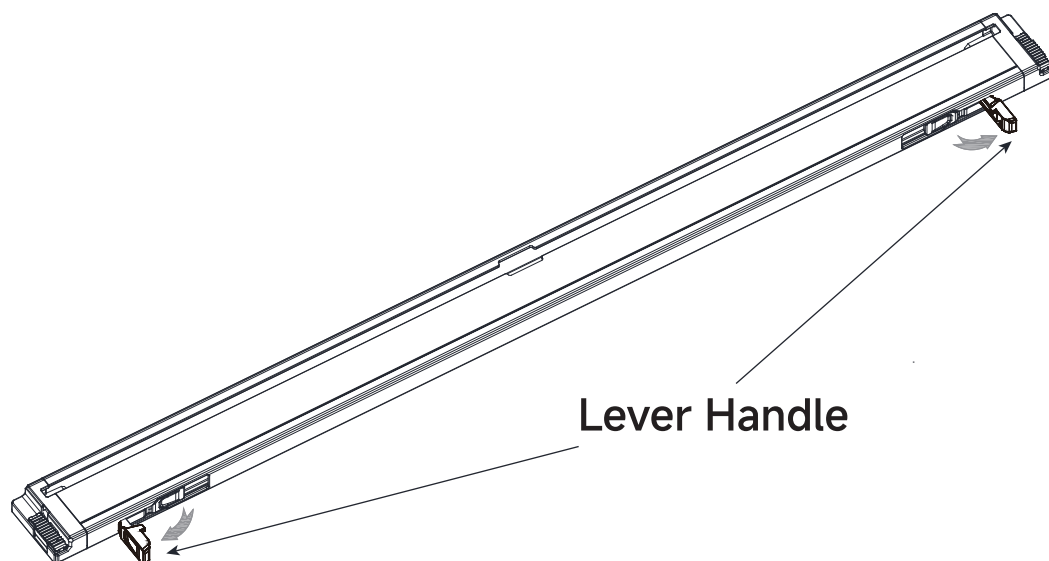


- 2** Unlock and remove the anti-theft component at the rear corner.
(skip this step if the anti-theft component is not installed).

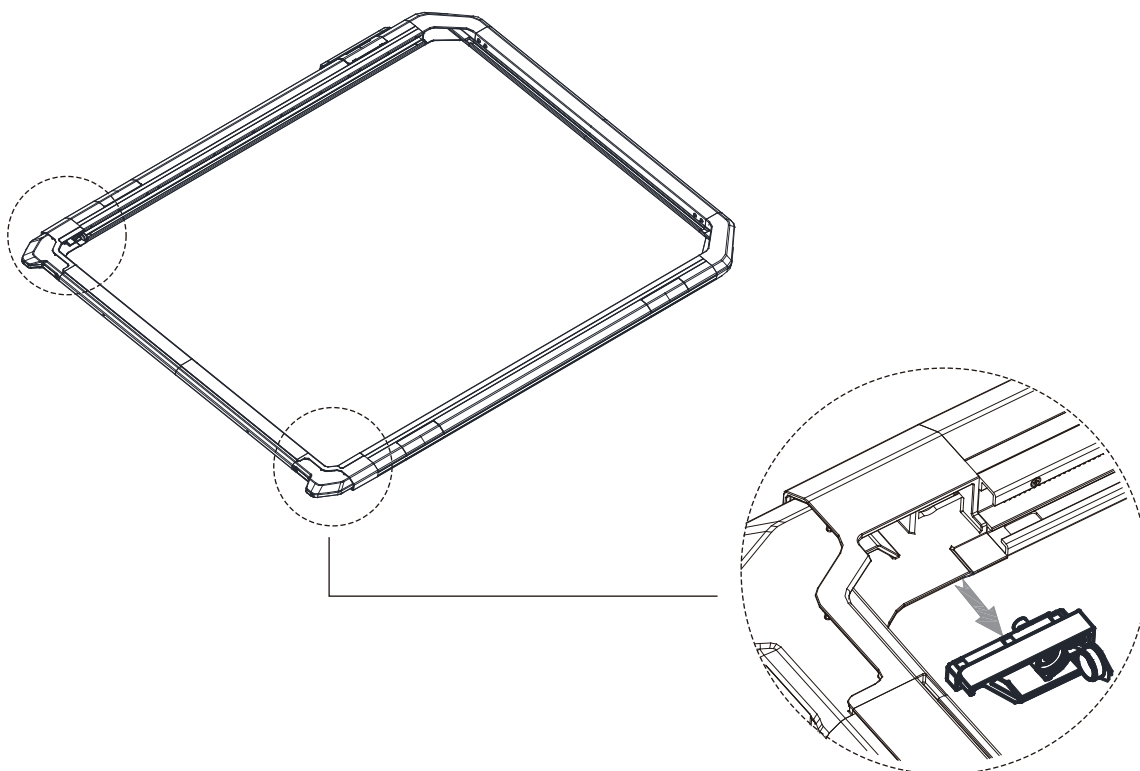


3

Slide the quick-release crossbar into the side rail along the mounting slot at the rear end of the roof rack.



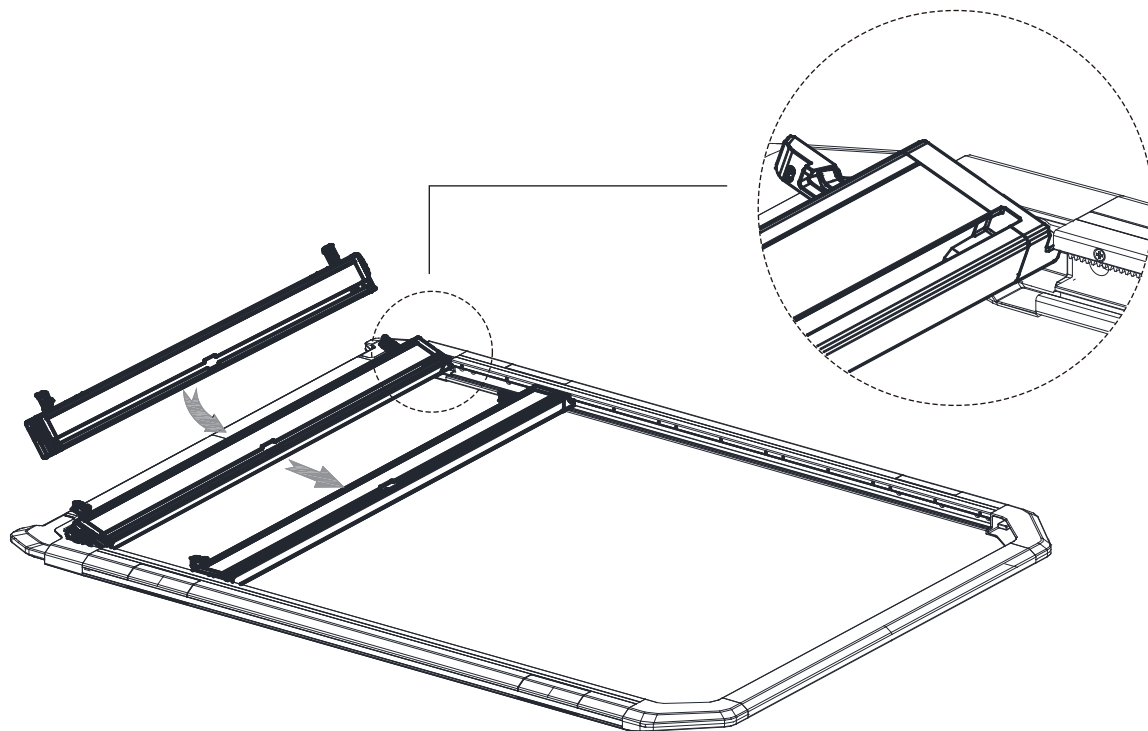
**4**

After moving the crossbar to the desired position, flip the handles on both sides inward until they are closed flush with the sides of the crossbar.

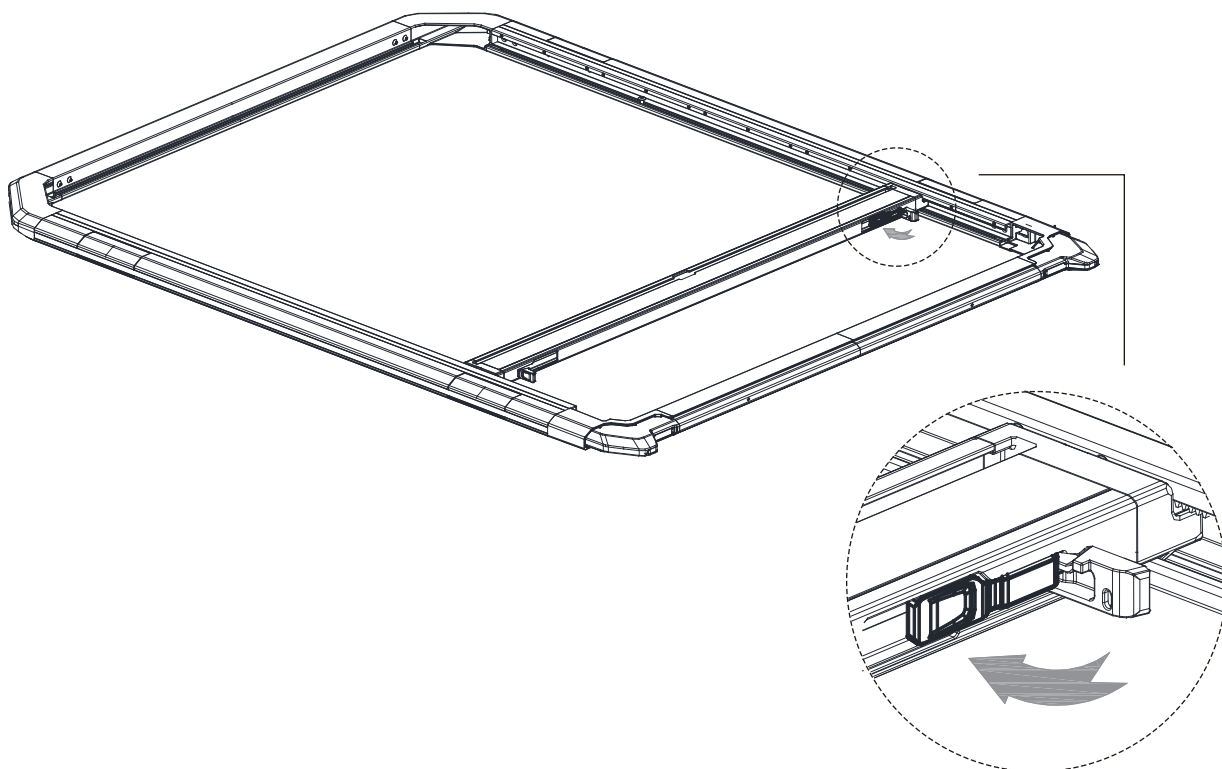

5

Note: In rare cases, the handle may not close due to gear misalignment. Do not force it closed to avoid damage. Slightly adjust the crossbar position forward or backward, then close the handle again.

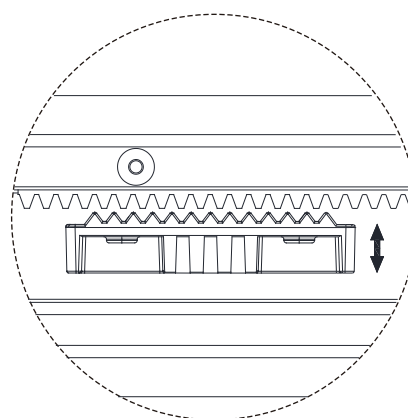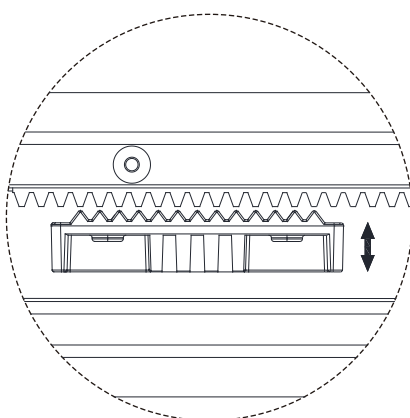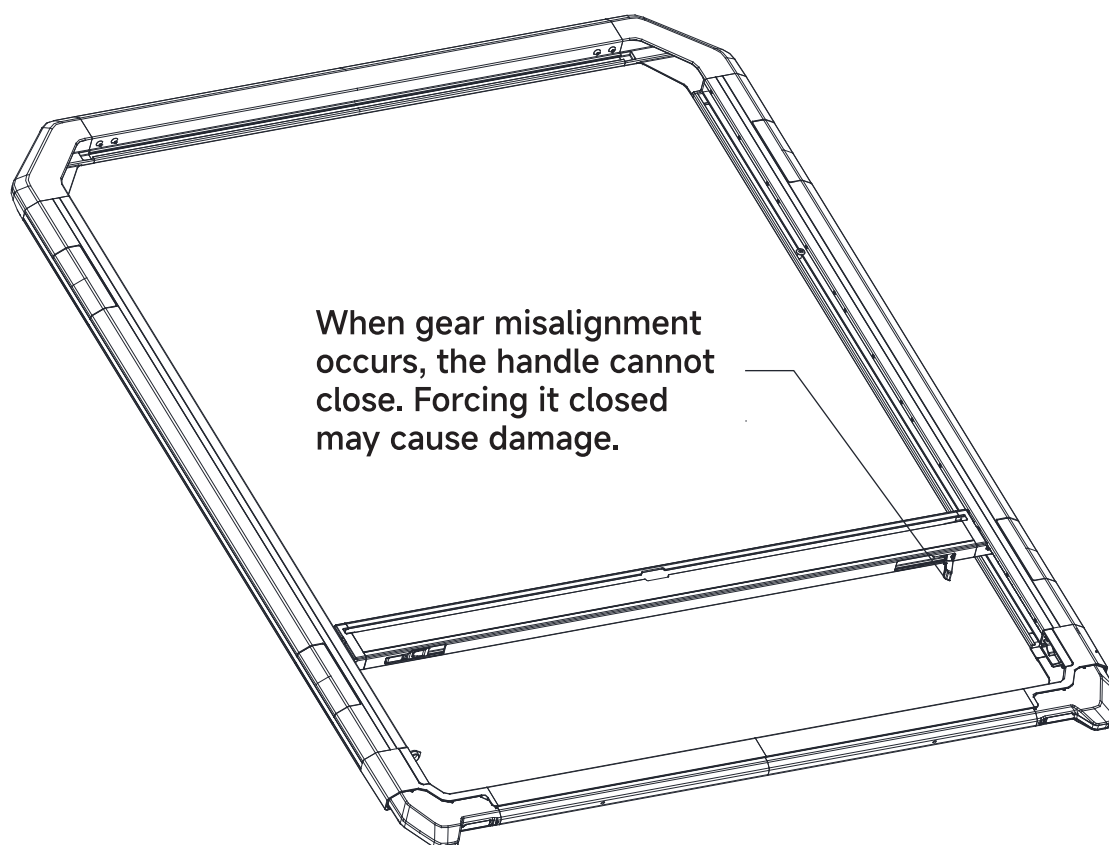

Gear misalignment: the gear block on the crossbar collides with the top of the gear rack on the side rail.

Wave Infinite Quick-Release Crossbar Usage Notes

- **When mounting roof gear, first unlock the quick-release crossbar and adjust its position according to the installation requirements. After securing the gear, move the gear and crossbar together to the desired position, then lock the crossbar.**
- **Do not use the quick-release crossbar to secure heavy equipment such as roof tents.**
- **Before each trip, check the tightness of the roof rack and all mounted gear. If any looseness or damage is found, stop using the product and replace the affected parts immediately.**
- **Distribute the load on the crossbar as evenly as possible. Avoid long-term loading on one side, which may cause deformation or loosening.**
- **It is recommended to use the quick-release crossbar together with standard crossbars. Heavy equipment should be mounted on the standard crossbars.**
- **Do not use the quick-release crossbar to carry gear during extreme off-road driving. On long periods of rough roads, check the tightness of the gear daily.**
- **To ensure optimal performance, it is recommended to have all mounted equipment professionally inspected every six months by an authorized service center or official customer support.**



Company : ARCANE WARRIOR Limited
ADD : 111 Qian Jin Rd,Danyang,Jiangsu,China
Phone number : 4001031167
+86 15189151869
Global Business Team Tel : +86 13063957170
Email : info@arcanewarriorglobal.com



<https://arcanewarrior.us>




M'LinkX

车顶多功能拓展平台

INSTALLATION
安装与用户指南

USER GUIDE

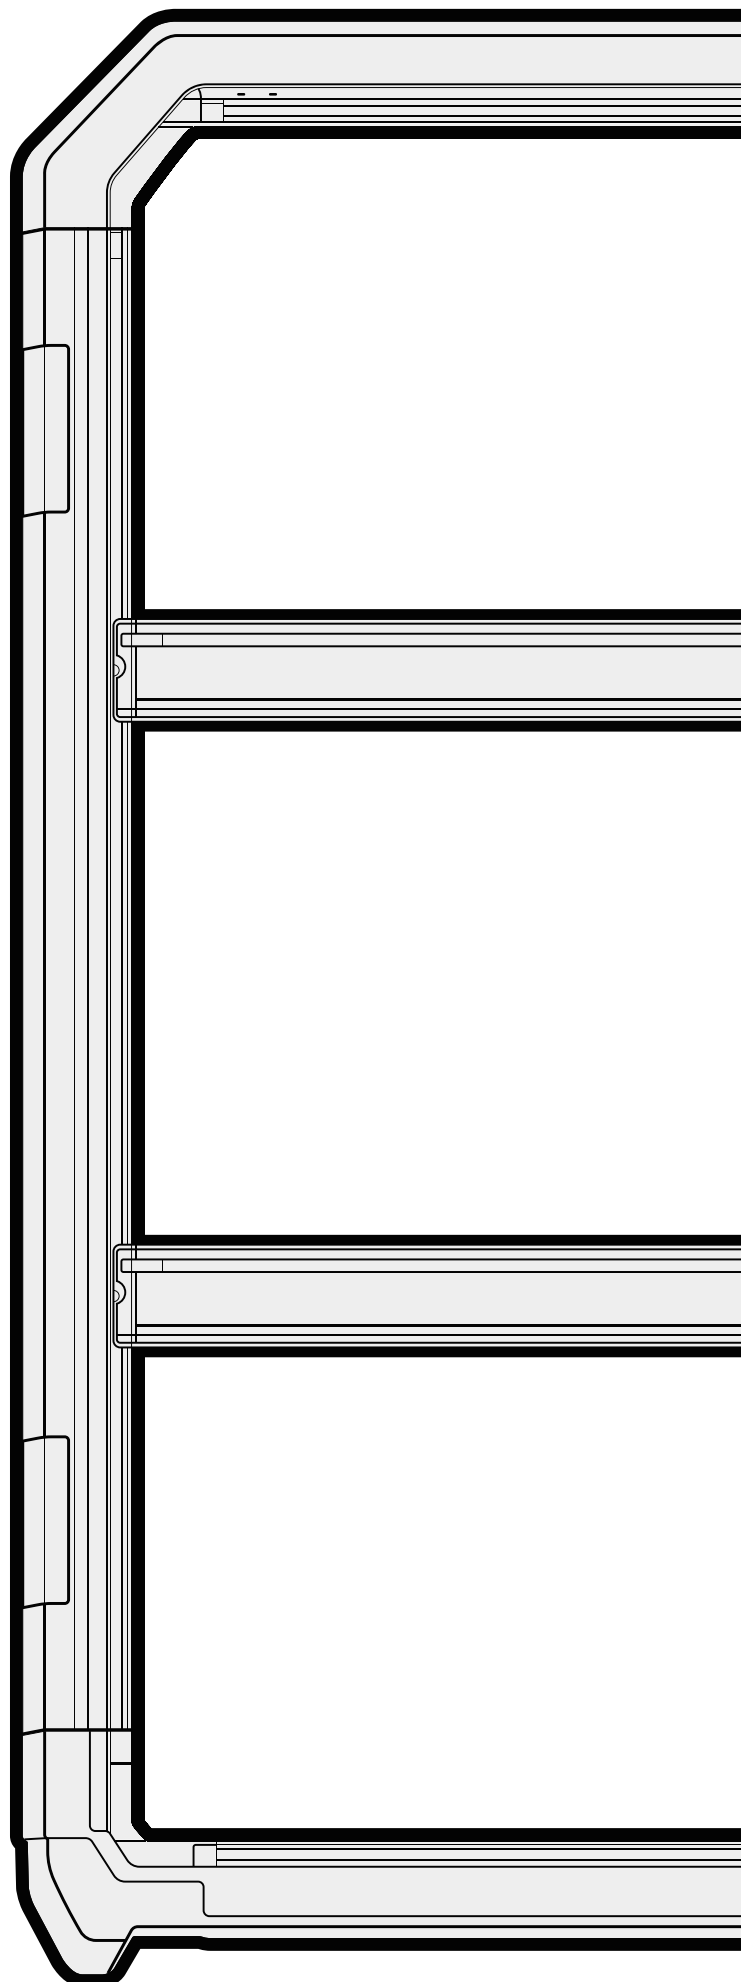

01 重要安全提示

为降低风险，请在安装与使用前完整阅读并遵循本手册。

⚠ 安全注意事项

车辆行驶前，请确保所有部件及固定支架安装正确且完全紧固。

请随车携带安装工具，长途行驶中，请定期检查各部件紧固程度，崎岖路段，应缩短检查周期。

装载物品请勿超出车辆允许的最大边界。

请确保所有装载物品重量总和不超过本产品规定的最大载荷（总重量 = 本产品 + 安装支架 + 装载物），请严格遵守汽车制造商允许的最大载荷规定。

装载物品应以尽可能低的重心均匀分布。

请根据车辆负载、道路状况以及驾驶条件，调节车辆速度，车辆的操控、转弯、制动性能会随着车辆负载增加而降低，任何情况下，行驶速度不得超过 120km/h，经过减速带或持续颠簸路面，不得超过 10km/h，请勿超速行驶。

禁止改装（如钻孔、切割等破坏性操作）。

安装和拆卸过程中请注意人身安全。

请勿在车顶平台上跳跃或从事不良活动，以免损坏车辆或发生意外。

请确保装载物与天窗玻璃有足够安全的间隙，且不会影响天窗开启。注：部分车型（见说明书）安装车顶平台后不可开启天窗，请严格遵守本产品的使用规定，错误使用或操作不当导致的财产损失，制造商概不负责。

请务必遵守当地法律和法规。

⚠ 养护说明

请勿使用强酸、强碱等溶液清洗（如酒精、汽油、漂白剂等），建议选用清水或专用合格洗车液，防止部件变色、腐蚀或老化。

考虑燃油经济性以及使用安全，长期不使用时请拆卸，清洁干燥后存储。

定期检查部件是否有损坏，请及时更换有安全隐患的部件。


请勿超载使用，超载使用导致的损坏不属于保修范围。

产品在使用后或安装过程中造成的表面磨损、划痕、变色等人为损伤，不属于保修范畴。





越野环境可能更为复杂严苛，需缩短复检周期。
非铺装路段行驶务必格外小心。



使用与载荷指南

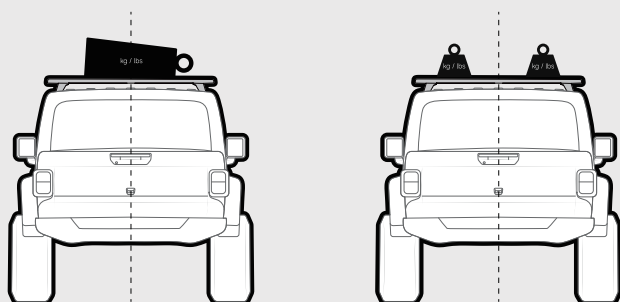


装载：低重心，纵向均匀分布；与天窗/天线保持间隙。

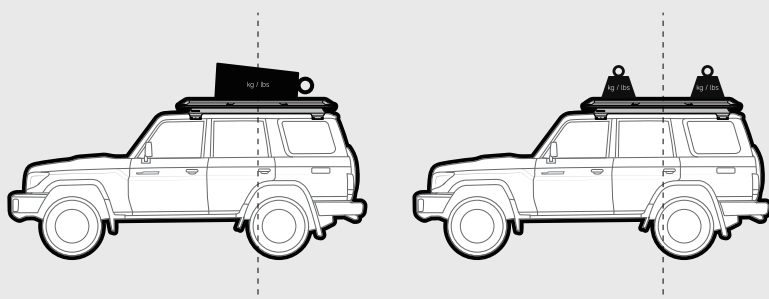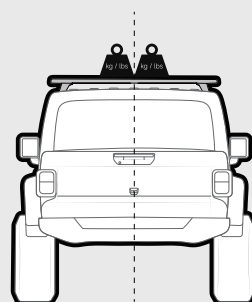


装载：避免负载集中在前部或后部。

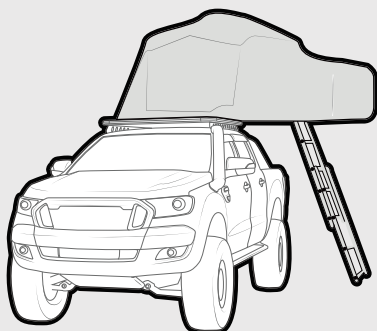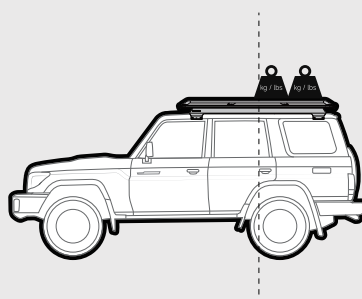

攀爬高度超过 1.2 米 / 4 英尺时，务必格外小心。

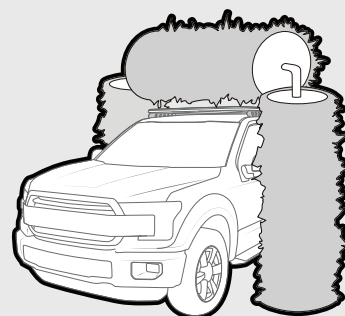

自动洗车前需拆除平台/附件。

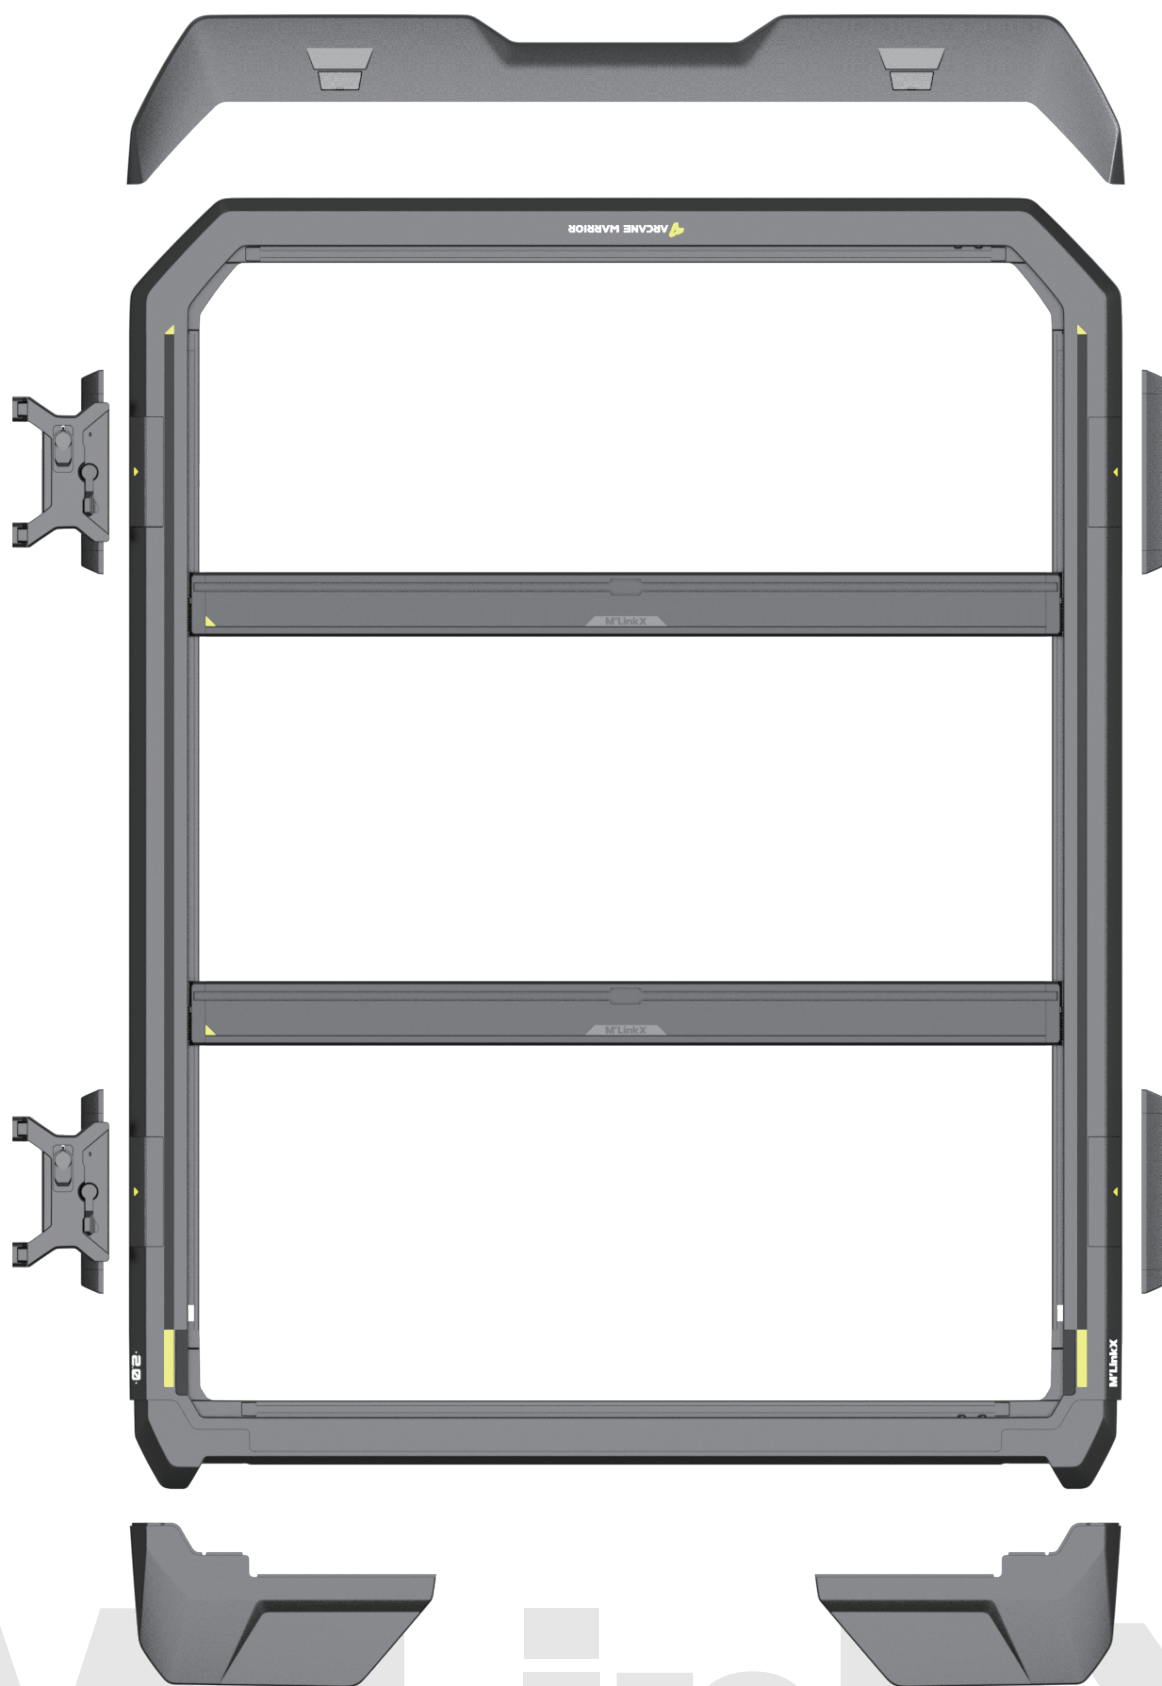

M'LinkX

此型号为 M'LinkX S2 版本


全系采用 AW 自主研发的旗舰级 **Arboris** 树脉架构

02

工具 & 零件

(多功能拓展横杆-Wave无极快锁版)

Wave无极快锁横杆

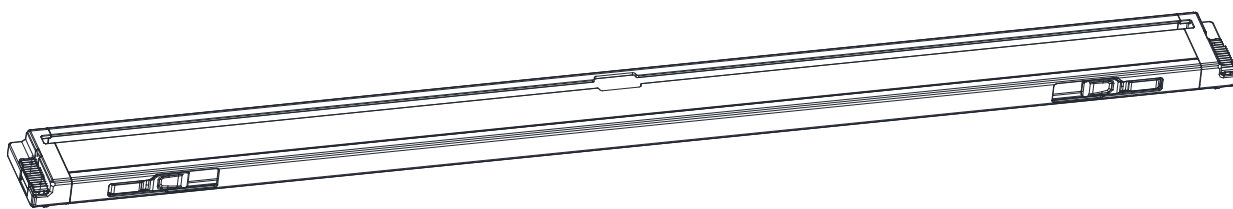

A x1

安装小贴士

此安装教程适用 M'LinkX车顶多功能拓展平台S2版本。
平台以外的组件需另外购买。

03 安装步骤指南




关注官方账号

手机扫一扫，查看安装视频。


1

将快锁横杆的两侧手柄向外掰开90°。

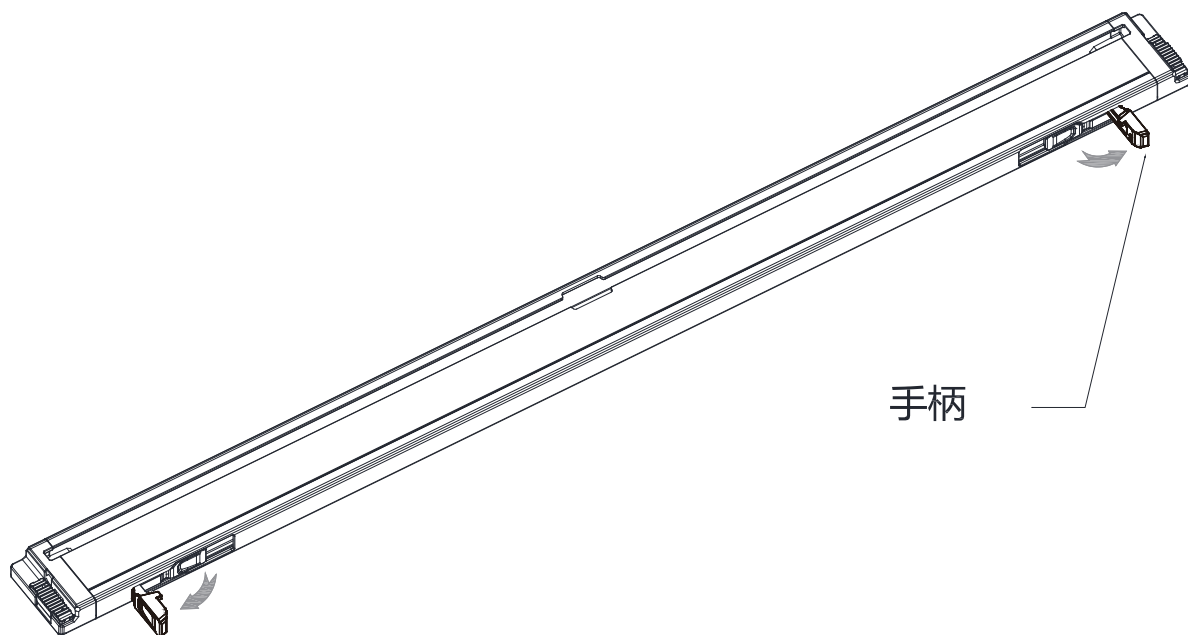


2

将后转角处的防盗组件解锁拆卸（若未安装防盗组件可跳过此步骤）。

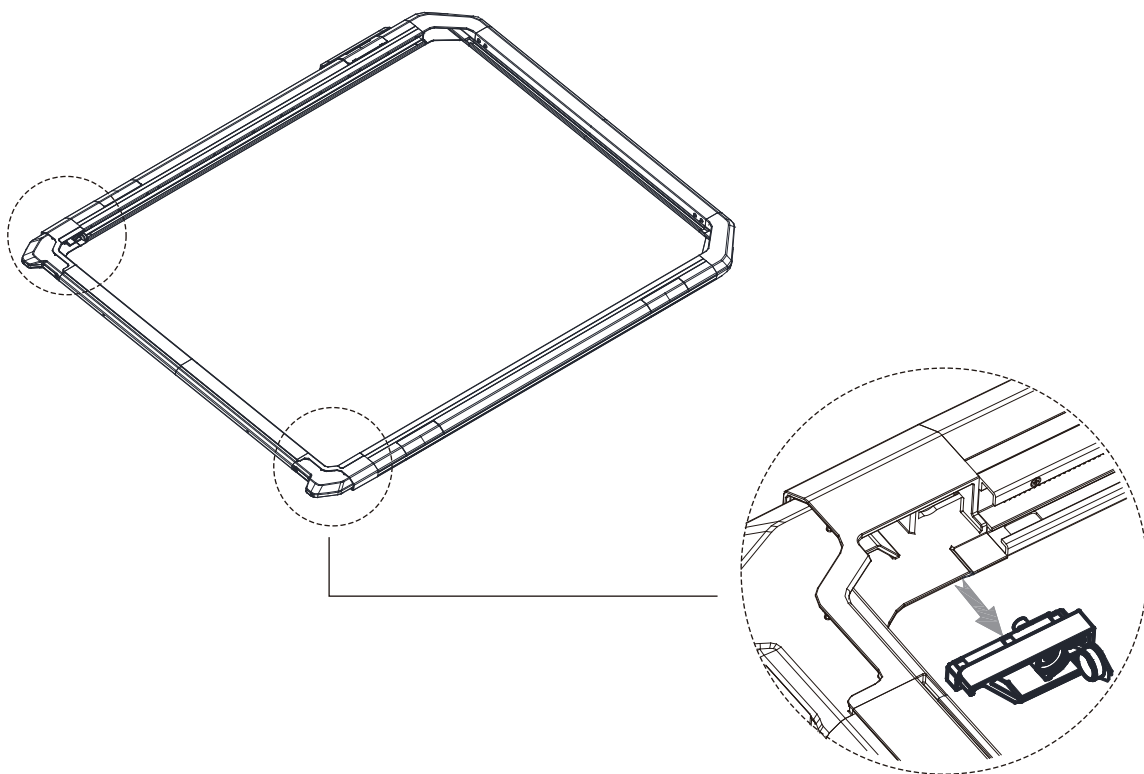


3

将快锁横杆顺着平台尾端的安装槽滑入纵杆内。

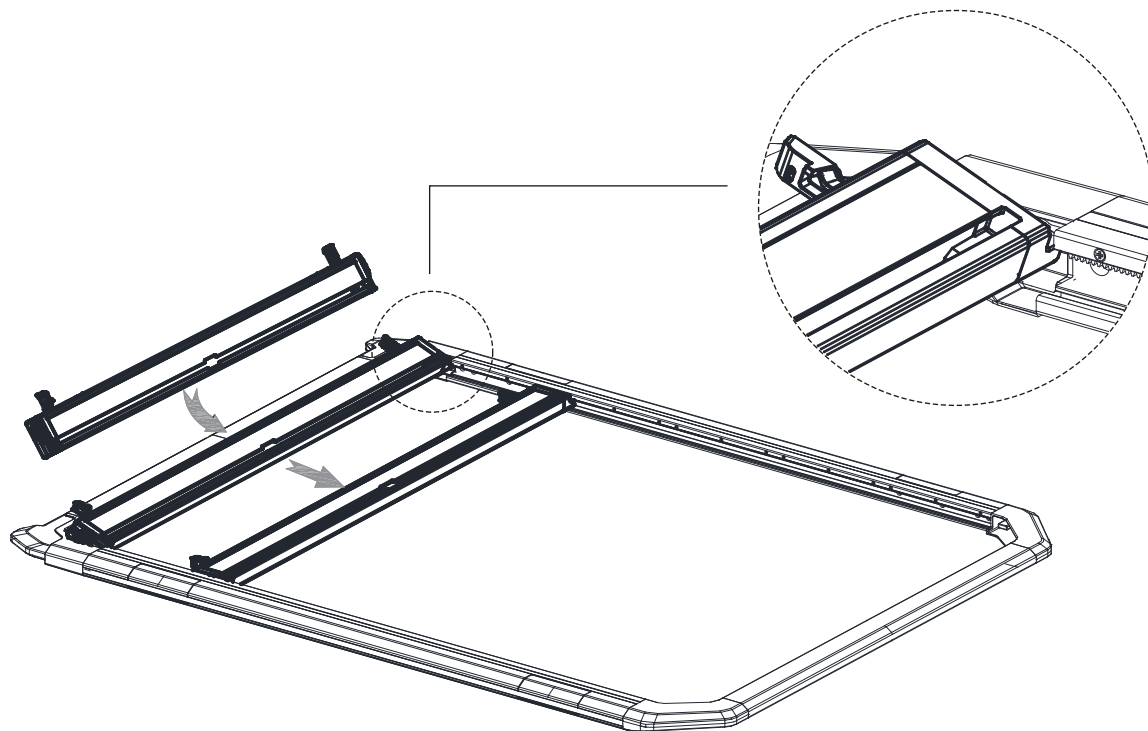




4

将横杆移至合适位置后，两侧手柄向内掰，直至手柄与横杆侧面闭合齐平。

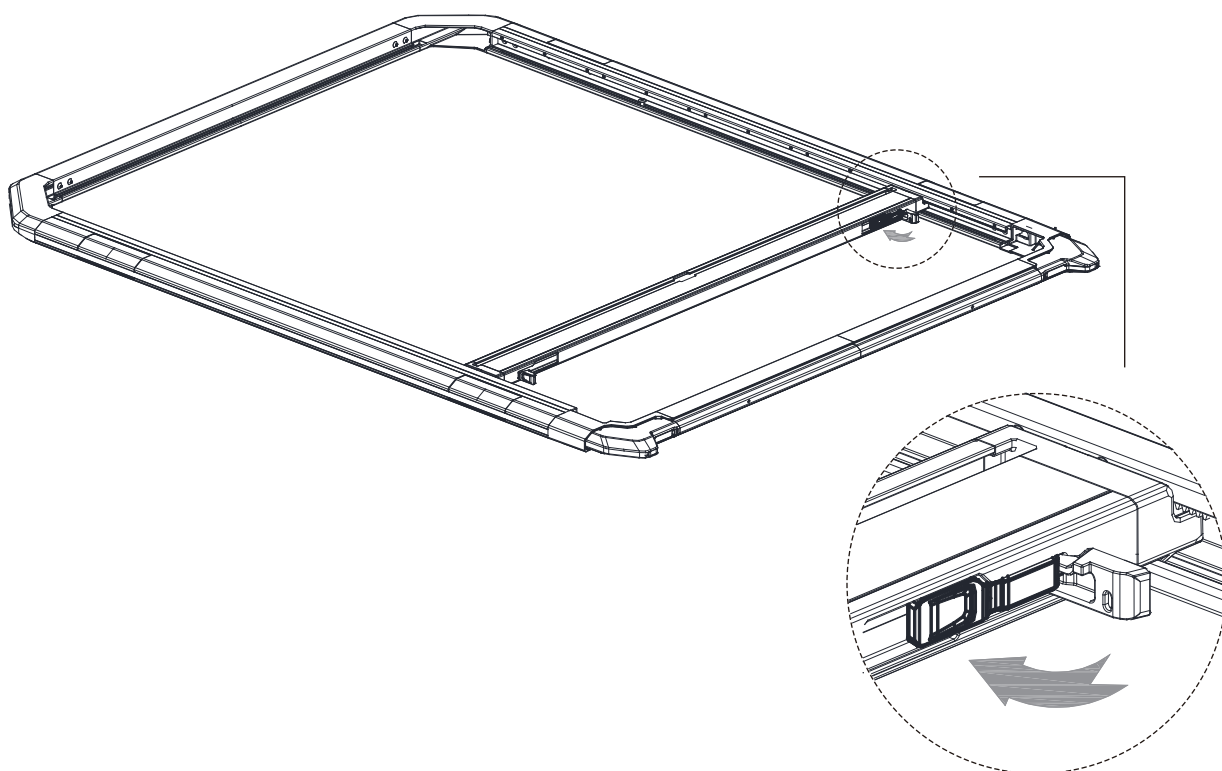

5

注意：手柄闭合时会有小概率出现撞齿现象，手柄将闭合不了，请勿强行闭合避免损坏。可将横杆位置前后微调，即可重新闭合手柄。

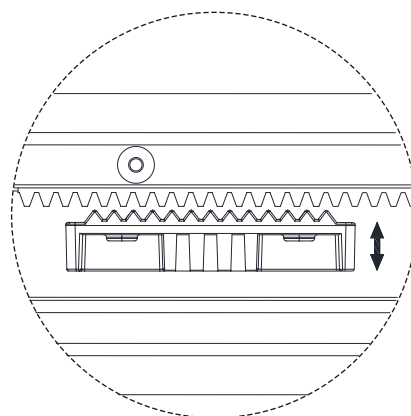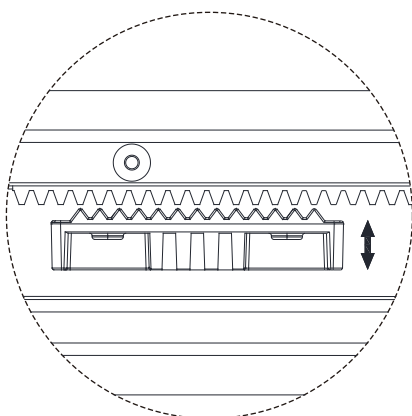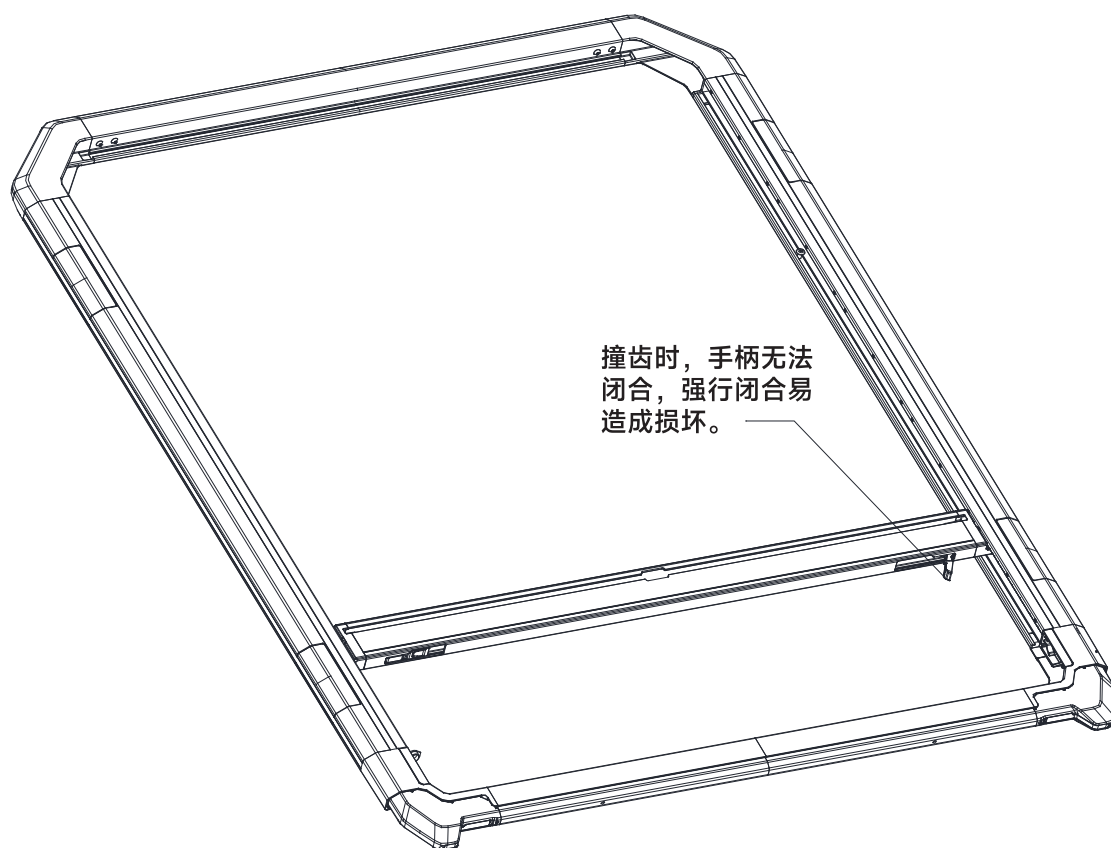

撞齿：横杆上的齿块与纵梁的齿条顶端相撞。

Wave无极快锁横杆使用注意事项：

- 1.搭载车顶装备时，请先将快锁横杆解锁，并根据装备安装需求调整位置，装备固定后将装备和横杆整体移至需要的位置，再锁紧横杆。**
- 2.请勿使用快锁横杆固定重型装备，如车顶帐篷等。**
- 3.每次出行前请检查平台本身以及装备的紧固程度，若有松动或损坏，请停止使用并及时更换。**
- 4.横杆上的负载装备尽可能均匀分布，避免长时间单侧受力导致变形或松动。**
- 5.建议快锁横杆与标准横杆搭配使用，重型装备可搭载在标准横杆上。**
- 6.重度越野请勿使用快锁横杆搭载装备，长时间颠簸路段请每天检查装备紧固程度。**
- 7.为确保产品始终处于最佳工作状态，建议每六个月去门店或联系官方客服，由专业人员进行全面检查所有装备紧固程度。**



公司名称：江苏越野共合文化有限公司
Company: ARCANE WARRIOR Limited

地址：江苏省丹阳市开发区前进路 111 号
ADD: 111 Qian Jin Rd, Danyang, Jiangsu, China

电话：400 103 1167
15189151869

邮箱：peiji@arcanewarrior.com.cn

Global Business Team
Tel: +86-15189151869

Email: info@arcanewarriorglobal.com



<https://arcanewarrior.us>