




# M'LinkX

Roof Rack Platform

INSTALLATION USER GUIDE

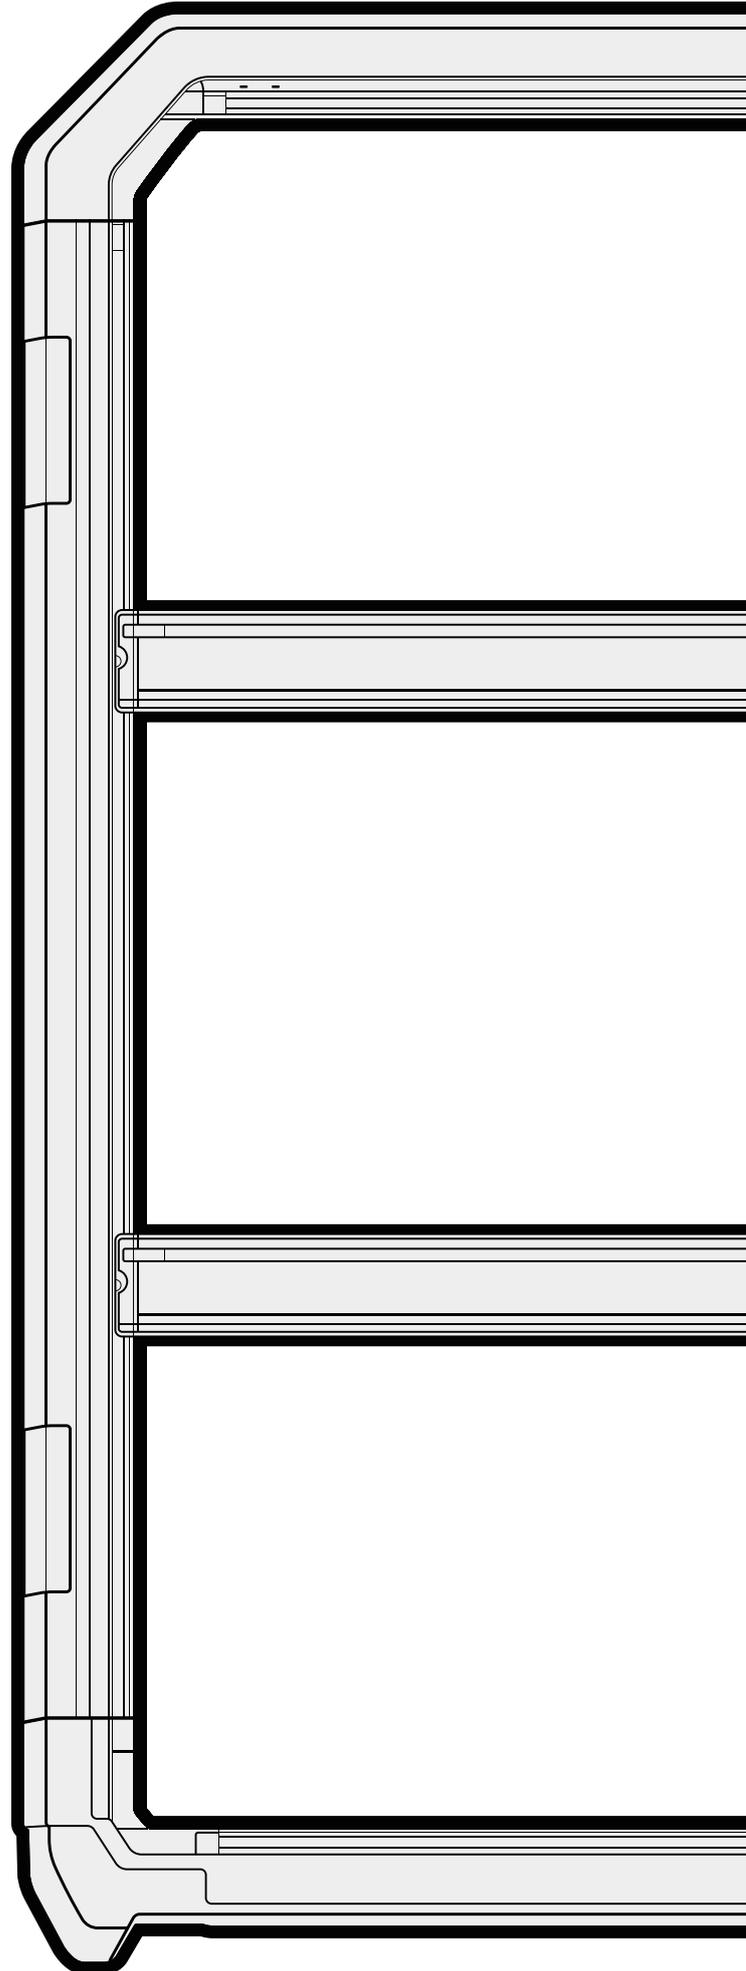

# Important Safety Notice

To reduce risk, read and follow this manual before installation and use.

## ⚠ Safety Precautions

- Ensure all components and mounting brackets are properly installed and tightened before driving.
- Keep installation tools in the vehicle and check fasteners regularly, more often on rough roads or long trips.
- Do not exceed vehicle limits or the product's rated load. Total weight includes the product, brackets, and cargo.
- Distribute cargo evenly and keep the center of gravity low.
- Adjust speed according to load and road conditions. Maximum 120 km/h, and 10 km/h over bumps or rough surfaces.
- Do not modify the product.
- Take care during installation and removal.
- Do not jump on the roof rack or engage in unsafe activities.
- Maintain clearance from the sunroof. Some vehicles may not allow sunroof operation after installation.
- Follow instructions and local laws. Manufacturer is not responsible for damage from misuse.


## ⚠ Maintenance Guidelines

- Clean only with water or approved car wash products. Avoid alcohol, gasoline, bleach, or strong chemicals.
- Remove the roof rack if unused for long periods. Clean and dry before storage.
- Check components regularly and replace any damaged parts.
- Do not overload. Overload damage is not covered by warranty.
- Surface wear, scratches, or discoloration from use or installation are not covered by warranty.





Off-road conditions are more demanding and require more frequent inspections. Use extra caution on unpaved roads.



## Use and Load Guidelines

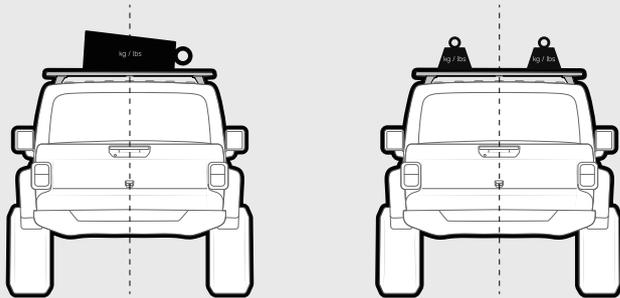


Loading: Keep a low center of gravity, distribute weight evenly, and maintain clearance from the sunroof and antenna.

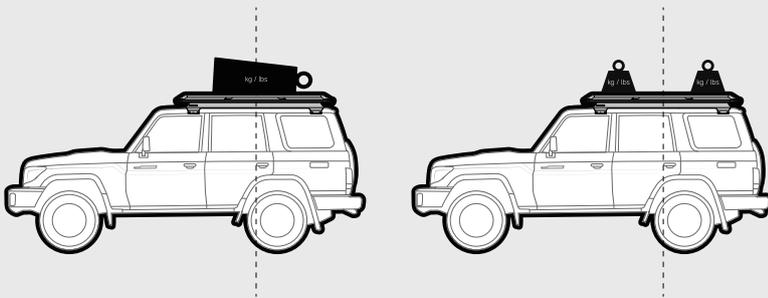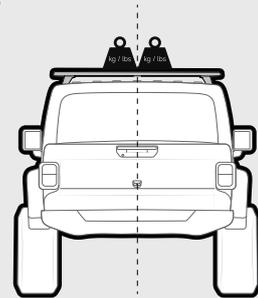


Loading: Avoid concentrating weight at the front or rear.

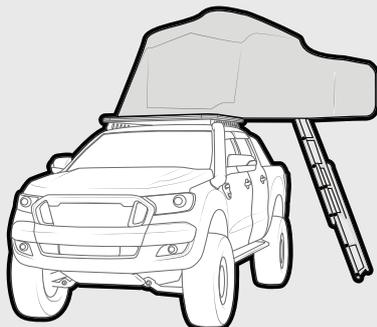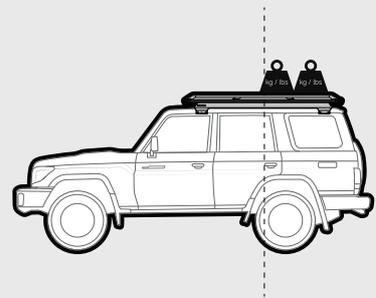

Use extra caution when climbing above 1.2m or 4 ft.

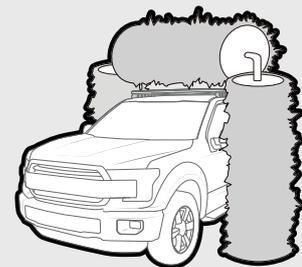

Remove the roof rack and accessories before automatic car washes.

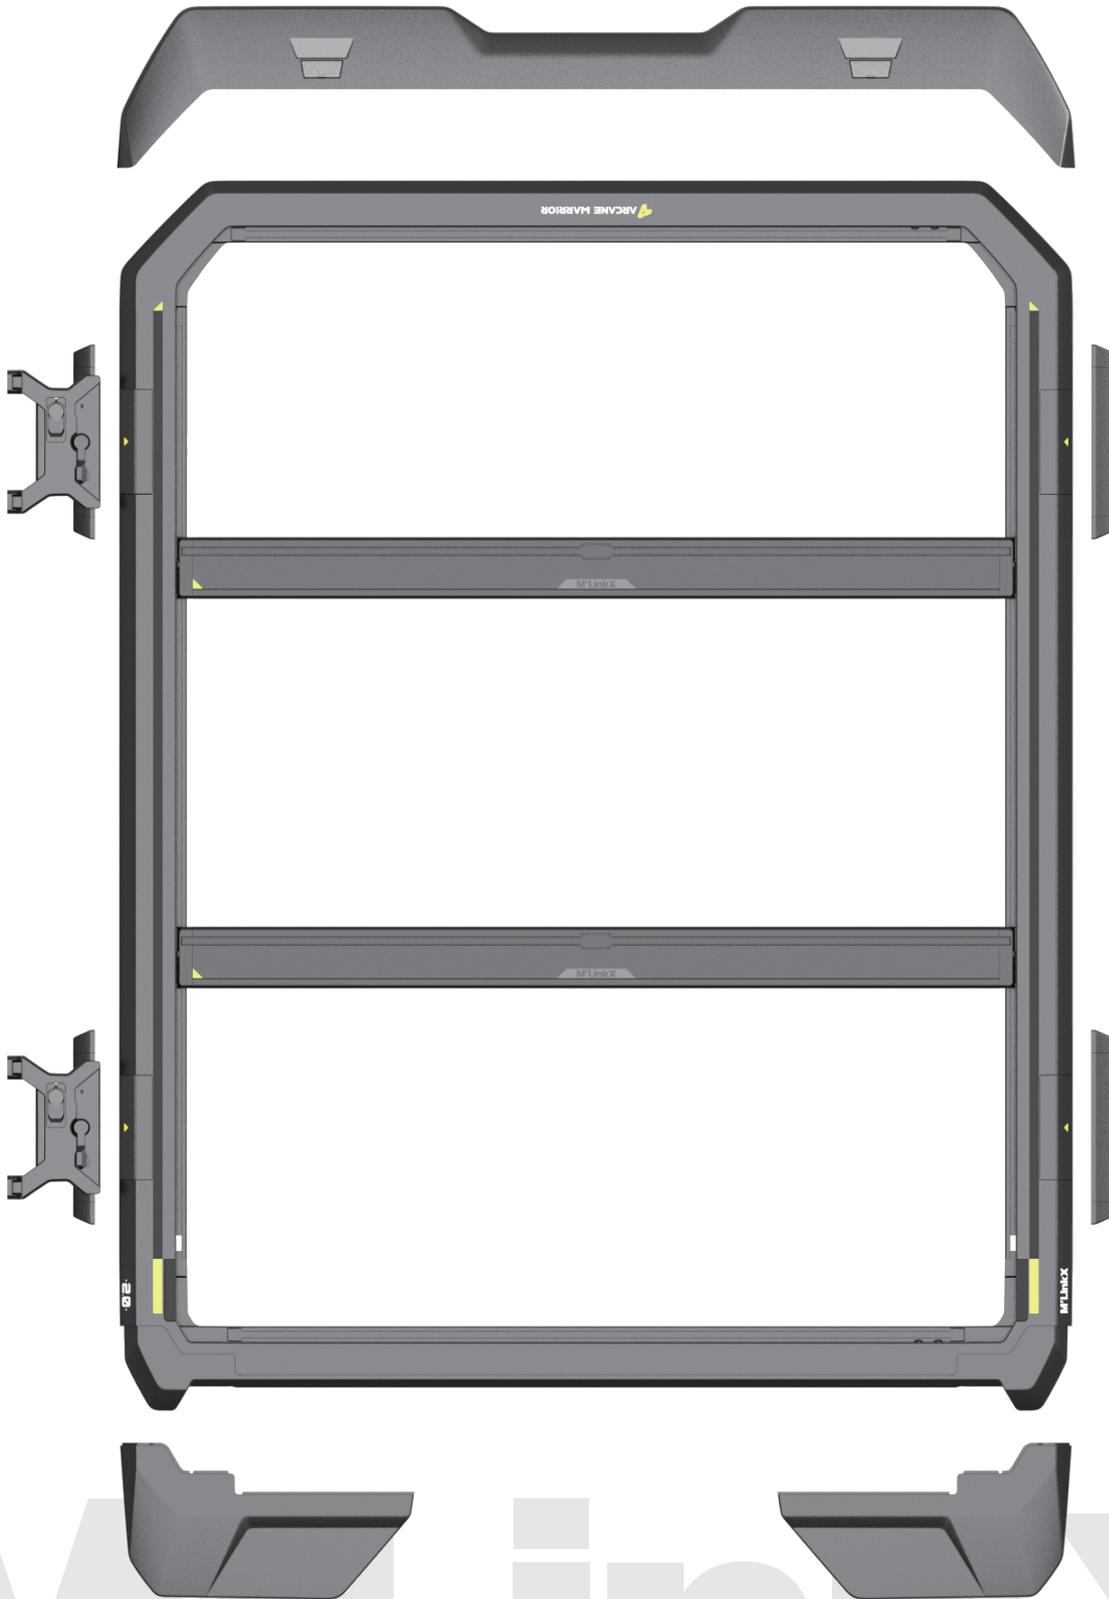


M'LinkX

This model is the M'LinkX S2 version and features AW's flagship Arboris structural architecture across the entire series.

# 02


## Tools & Parts (Prado / 普拉多)

Roof Rack Platform

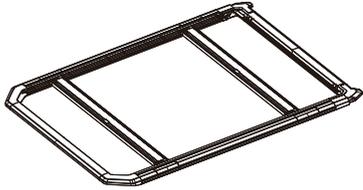

**A** x1

Mounting Brackets (Front, Rear, Left, Right)

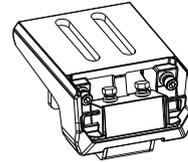


**B** x4

Mounting Bracket Covers




**C** x4

M8 ×20 mm Square Head Screws

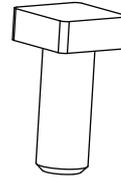


**D** x8

Double-Hole Washer




**E** x4

M8 Lock Nut




**F** x8

Hex Key Wrench



**G** x1

Open-End Wrench

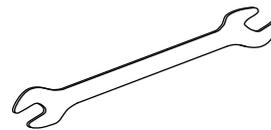

**H** x1

Combination Wrench



**I** x1

### Installation Tips

This guide applies to the M'LinkX Roof Rack Platform S1 and S2 versions. Components beyond the roof rack must be purchased separately.


# 03

## Installation Step Guide




Scan the QR code with your phone to watch the installation video.

- 1 Slide 4 M8 ×20 mm square head screws into the bottom of each side of the roof rack.

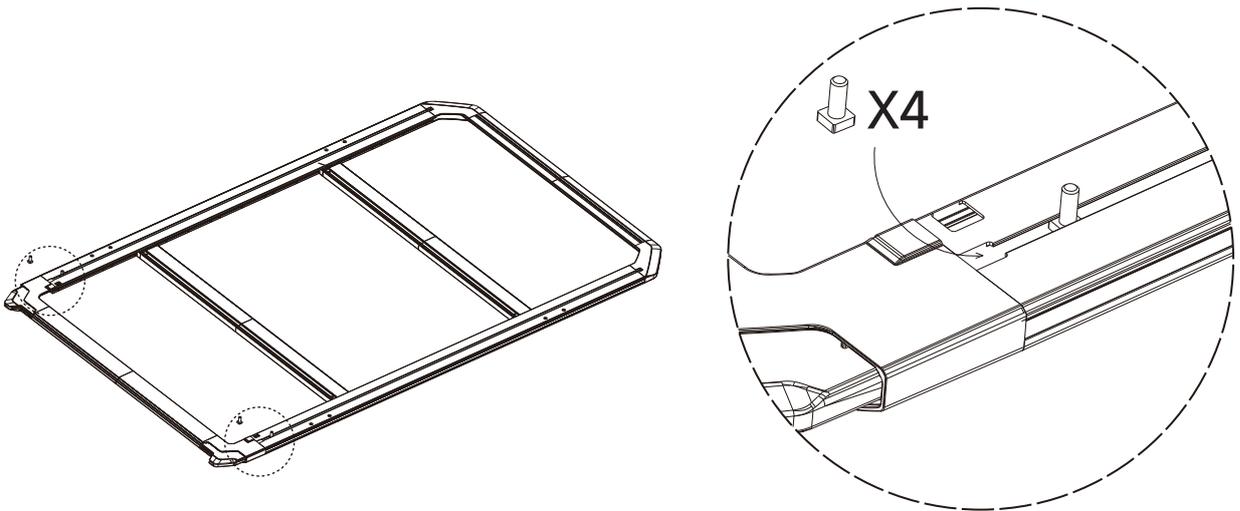


- 2 Take out 4 mounting brackets, making sure to distinguish front, rear, left, and right.

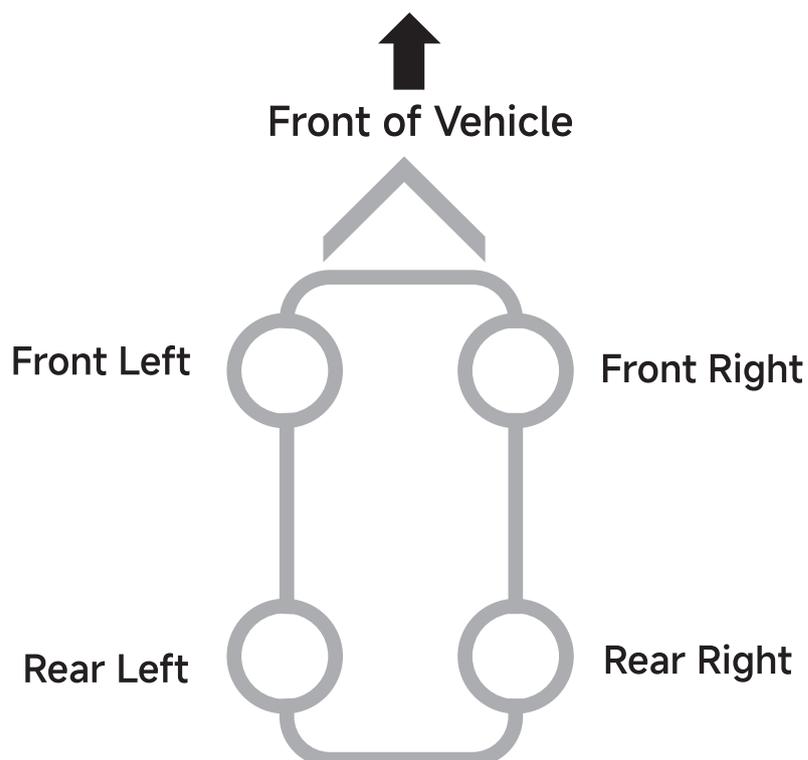


**3**

As shown, loosen the screws on the mounting brackets without removing them completely.

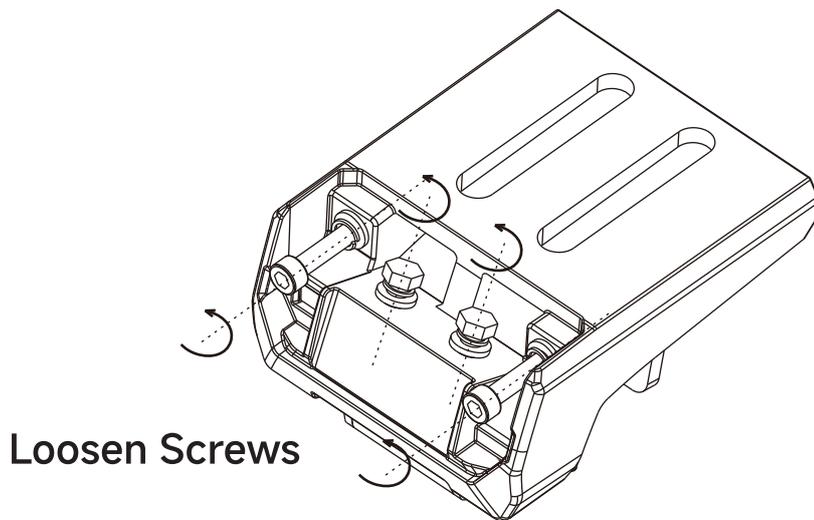


**4**

Install the 4 mounting brackets on the bottom of the roof rack according to the labels, 2 on each side, making sure to distinguish front, rear, left, and right.

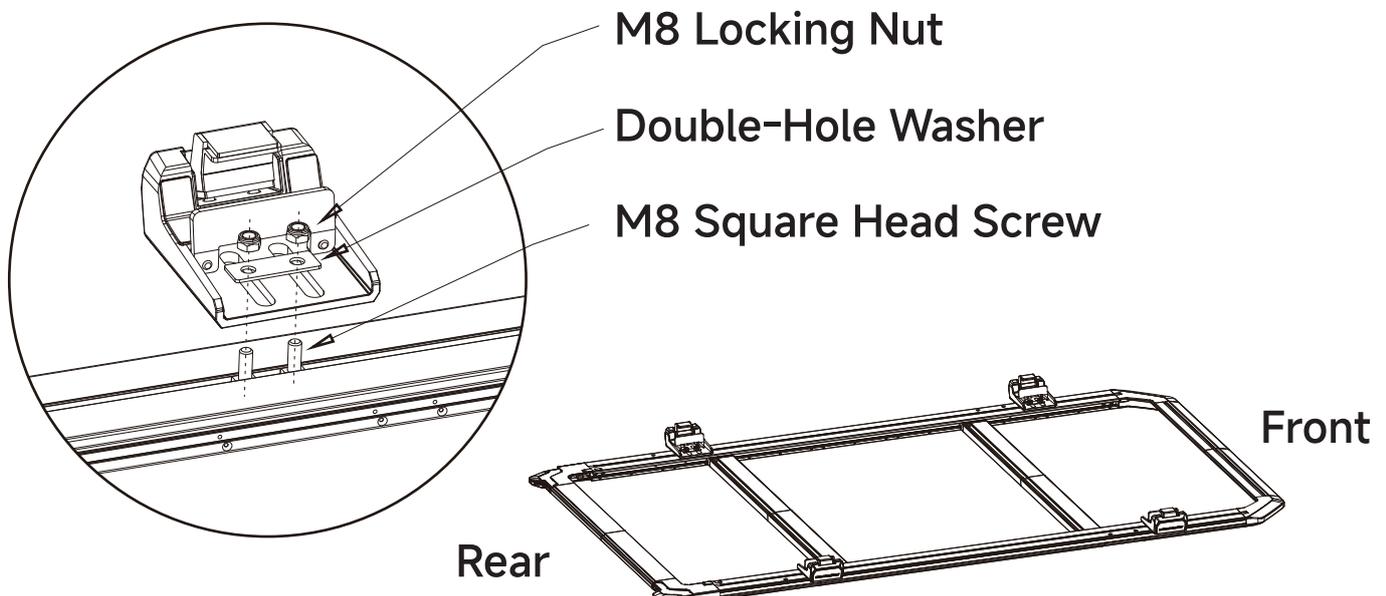


**5**

**Lift the roof rack onto the vehicle, aligning the front and rear positions according to the dimensions below.**

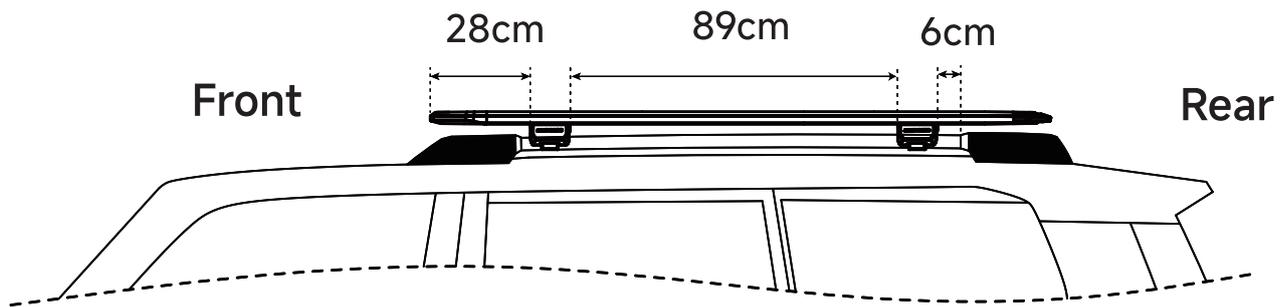


**6**

**Adjust the roof rack to ensure it is centered on the vehicle roof.**

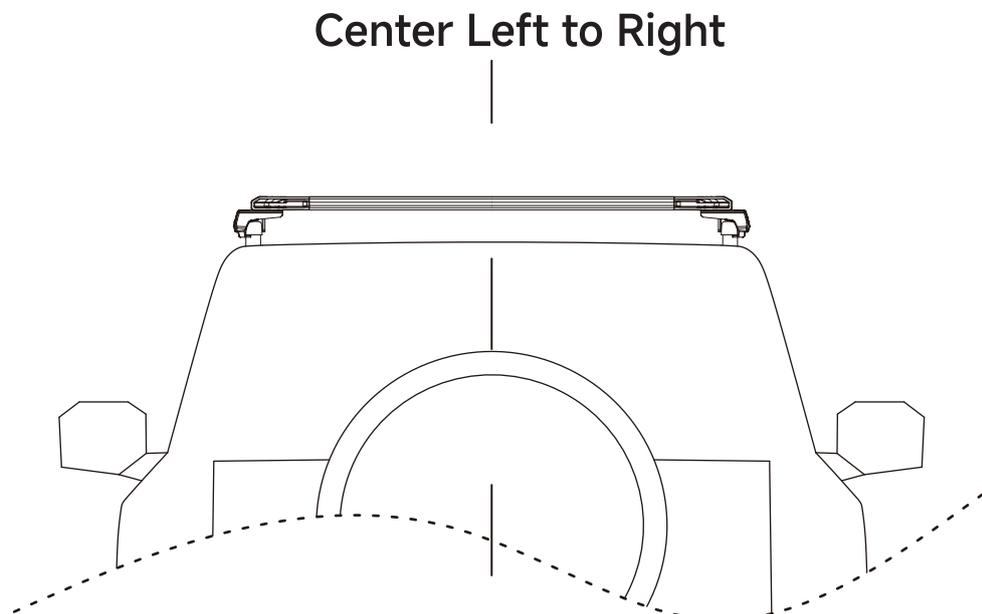


**7**

**Clamp the mounting brackets onto the vehicle's roof rails and tighten the screws.**

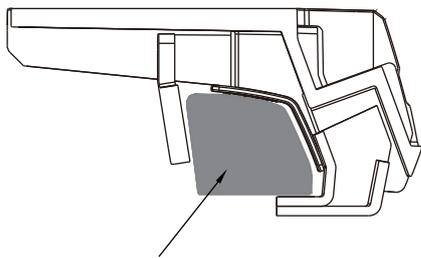


Mounting Brackets: Clamp onto Vehicle Roof Rails

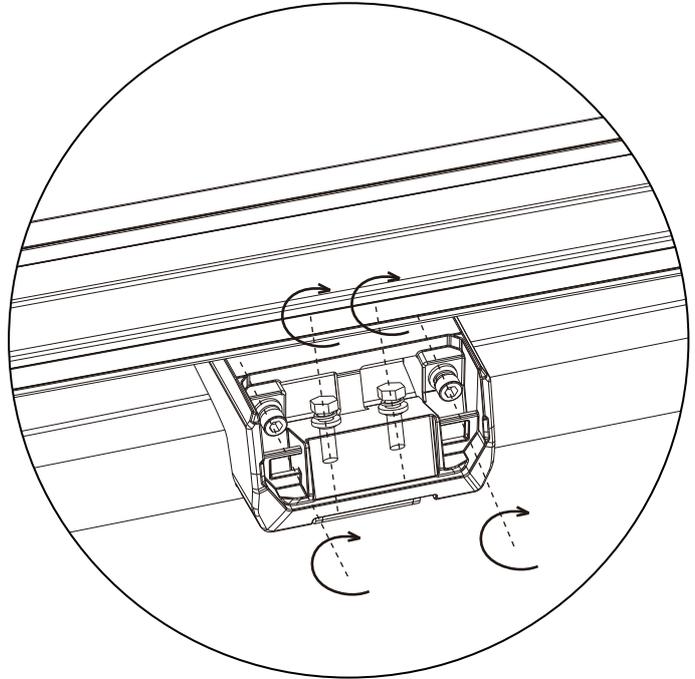

**Recommended tightening torque: 6–7 N·m**

**8**

**Tighten the nuts that secure the brackets to the roof rack.**

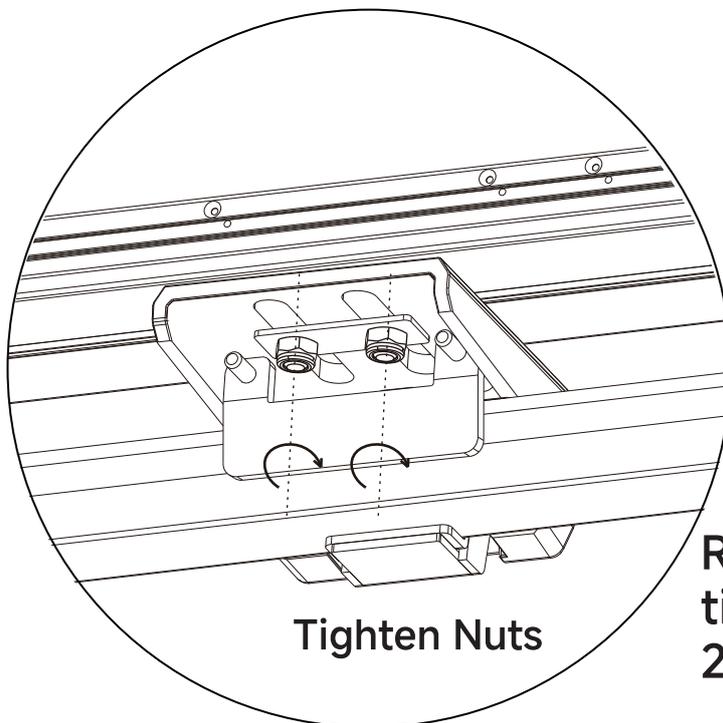


**Tighten Nuts**

**Recommended tightening torque: 20–21 N·m**


**9**

**Install the 4 cover caps onto the brackets from the outside, one by one.**

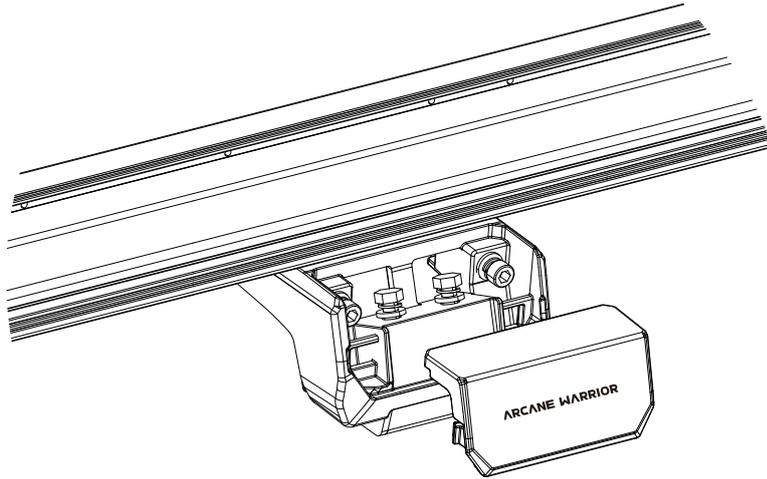

**10**

**Installation Complete.**

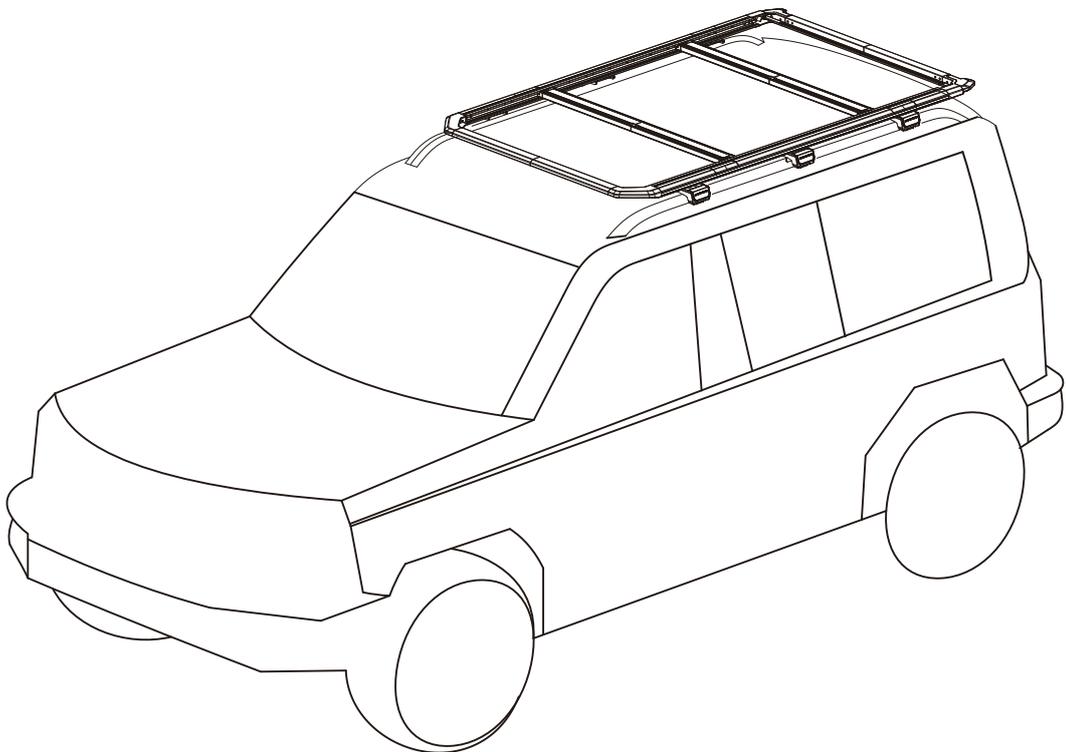

## **⚠ Troubleshooting Guide**

- Noise, looseness, or movement: Check the torque of fasteners, bracket alignment, and roof rack positioning. If necessary, retighten using a cross pattern as shown in Steps 1–10 of the diagram.
- Stripped threads: Replace the fasteners; if needed, replace the related brackets.
- Surface issues: Stop use immediately and contact support if there is severe structural damage.
- Stop use and contact support in the following cases: structural cracks, deformed fastening points, inability to reach torque, or persistent loosening.

## **⚠ Regulations and Warranty Information**

- Follow local traffic and load regulations. Do not exceed speed limits or load capacity.
- Warranty terms are based on the latest version published through AW official channels.



**Company :** ARCANE WARRIOR Limited  
**ADD :** 111 Qian Jin Rd,Danyang,Jiangsu,China  
**Phone number :** 4001031167  
15189151869

**Email :** peiji@arcanewarrior.com.cn  
**Global Business Team Tel :** +86-15189151869  
**Email :** info@arcanewarriorglobal.com

 <https://arcanewarrior.us>